SANYO

1122

SANYO PORTABLE STEREO MUSIC SYSTEM G-2615H G-2615N SERVICE MANUAL

1122

DIAL CORD STRING

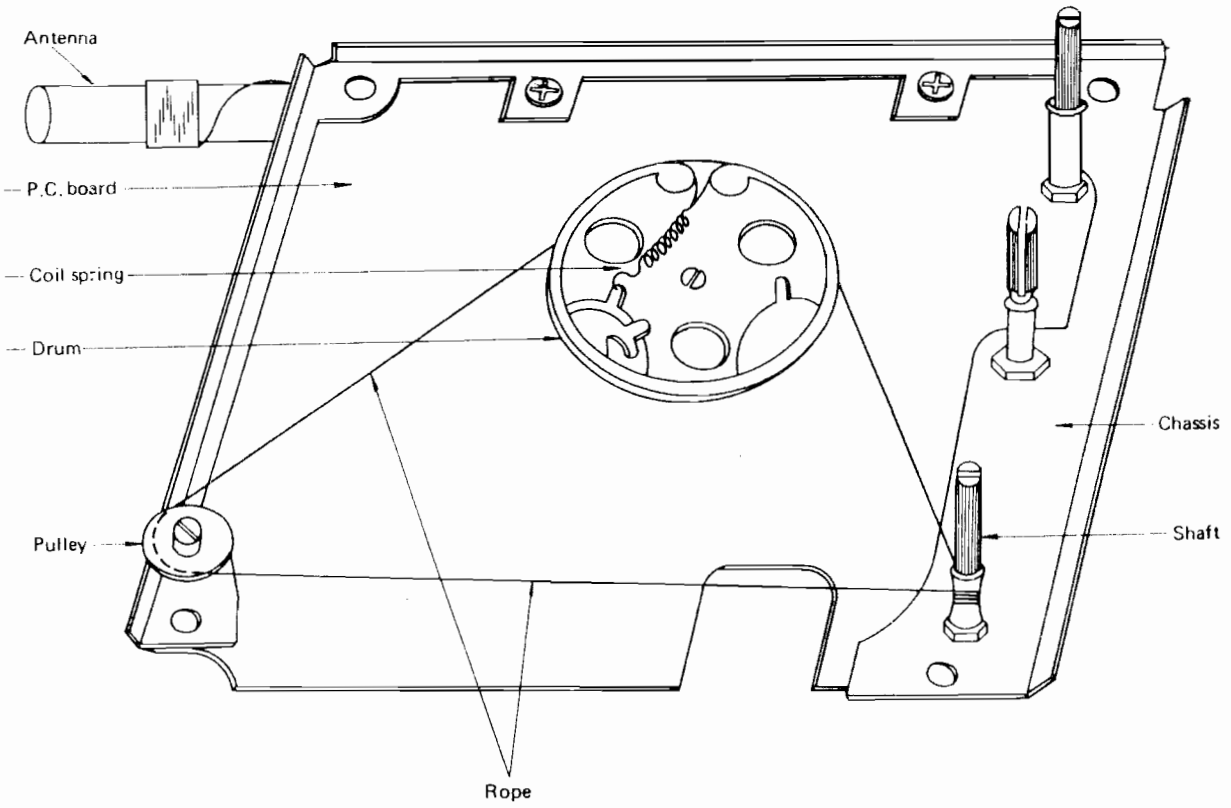

AM ALIGNMENTS (G-2615H)

Sequence of Alignment	Wave range	Signal generator		Dial pointer	Connection high side of signal generator to	Coil Adjustment	Indication
		Frequency	Modulation				
I.F.T	MW	455 KHz	AM 30%	Lower end	Thru loop antenna	T-1	Max. Output
I.F.T	MW	455 KHz	AM 30%	Lower end	Thru loop antenna	T-2	Max. Output
I.F.T	MW	455 KHz	AM 30%	Lower end	Thru loop antenna	T-3	Max. Output
Oscillator coil	MW	520 KHz	AM 30%	Lower end	Thru loop antenna	L-5	Max. Output
Antenna coil	MW	600 KHz	AM 30%	600 KHz	Thru loop antenna	L-1	Max. Output
Oscillator trimmer	MW	1650 KHz	AM 30%	Upper end	Thru loop antenna	Ct-4	Max. Output
Antenna trimmer	MW	1400 KHz	AM 30%	1400 KHz	Thru loop antenna	Ct-1	Max. Output
Oscillator coil	SW1	2.2MHz	AM 30%	Lower end	Thru loop antenna	L-6	Max. Output
Antenna coil	SW1	2.5MHz	AM 30%	2.5MHz	Thru loop antenna	L-2	Max. Output
Oscillator trimmer	SW1	7.3MHz	AM 30%	Upper end	Thru loop antenna	ct-5	Max. Output
Antenna trimmer	SW1	6.5MHz	AM 30%	6.5MHz	Thru loop antenna	ct-2	Max. Output
Oscillator coil	SW2	6.7MHz	AM 30%	Lower end	Thru dummy antenna	L-7	Max. Output
Antenna coil	SW2	7.0MHz	AM 30%	7.0MHz	Thru dummy antenna	L-3	Max. Output
Oscillator trimmer	SW2	22.8MHz	AM 30%	Upper end	Thru dummy antenna	ct-6	Max. Output
Antenna trimmer	SW2	21.0MHz	AM 30%	21.0MHz	Thru dummy antenna	ct-3	Max. Output

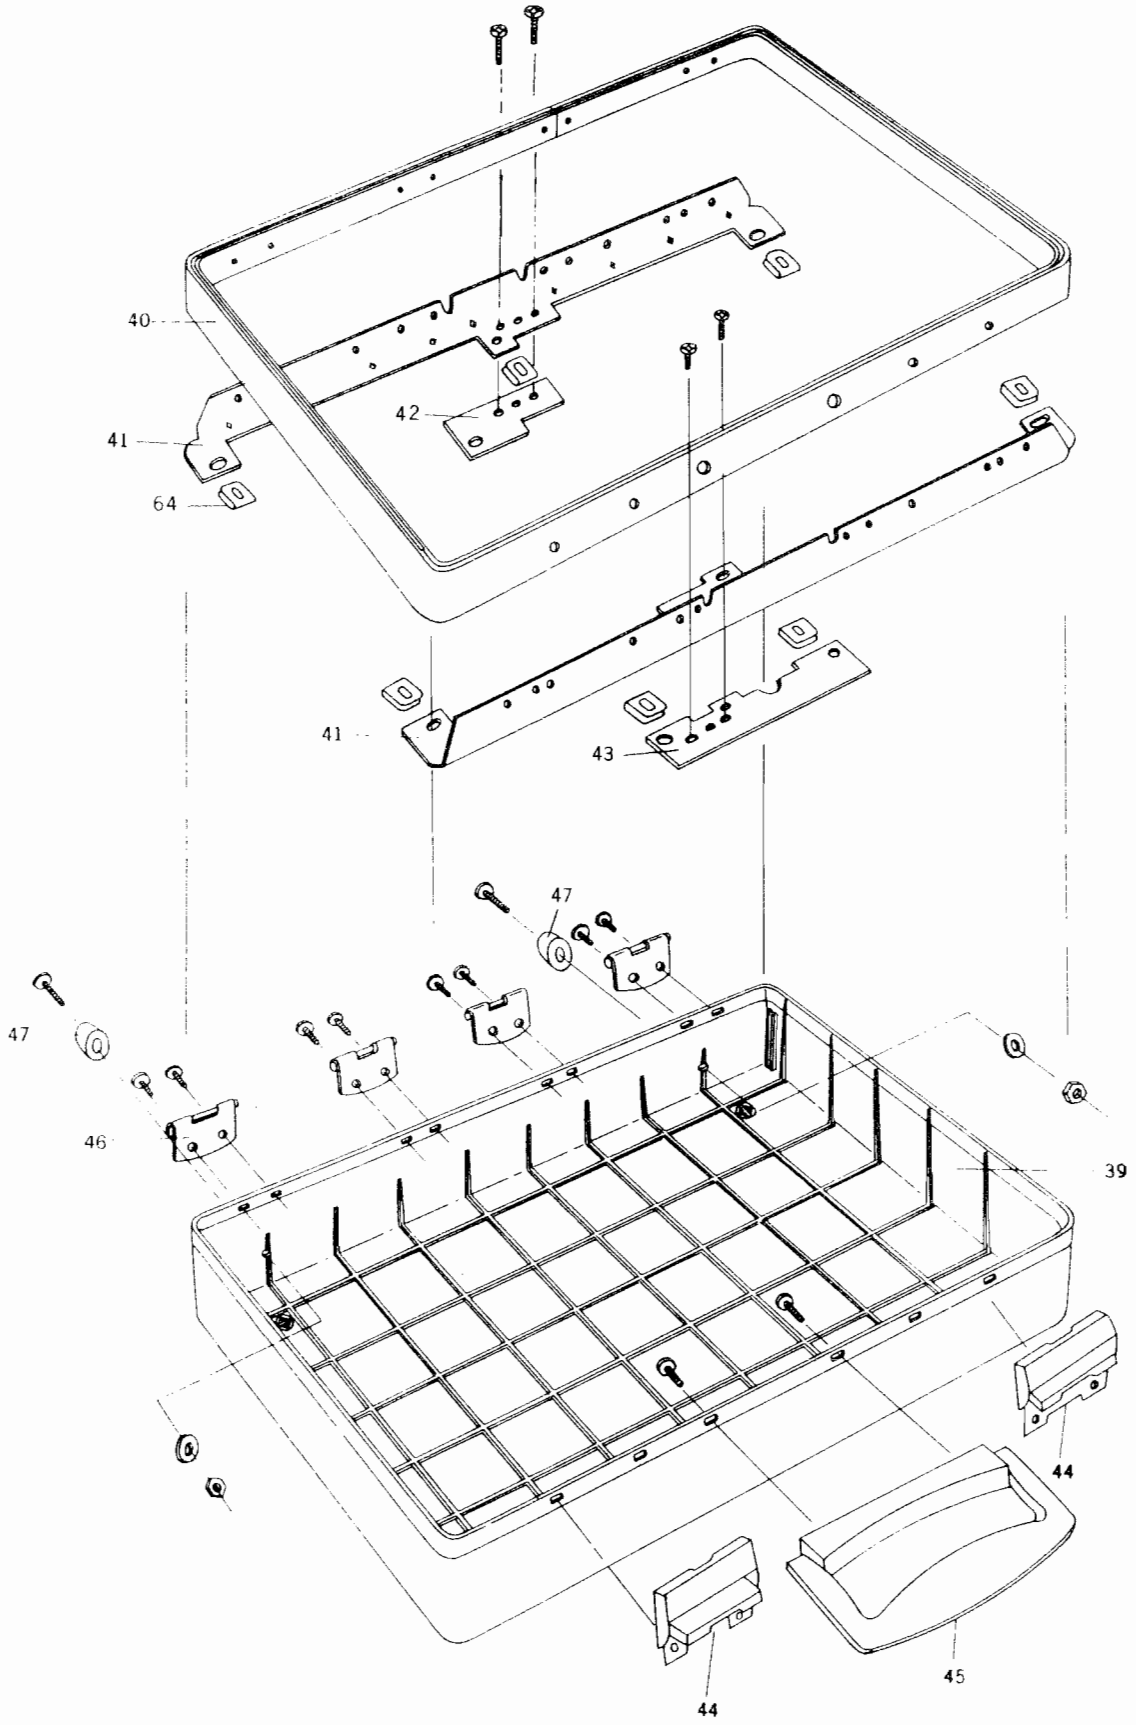
40
42
41
64
41
43
47
47
46
39
44
44
45

EXPLODED VIEW (MECHANISM)

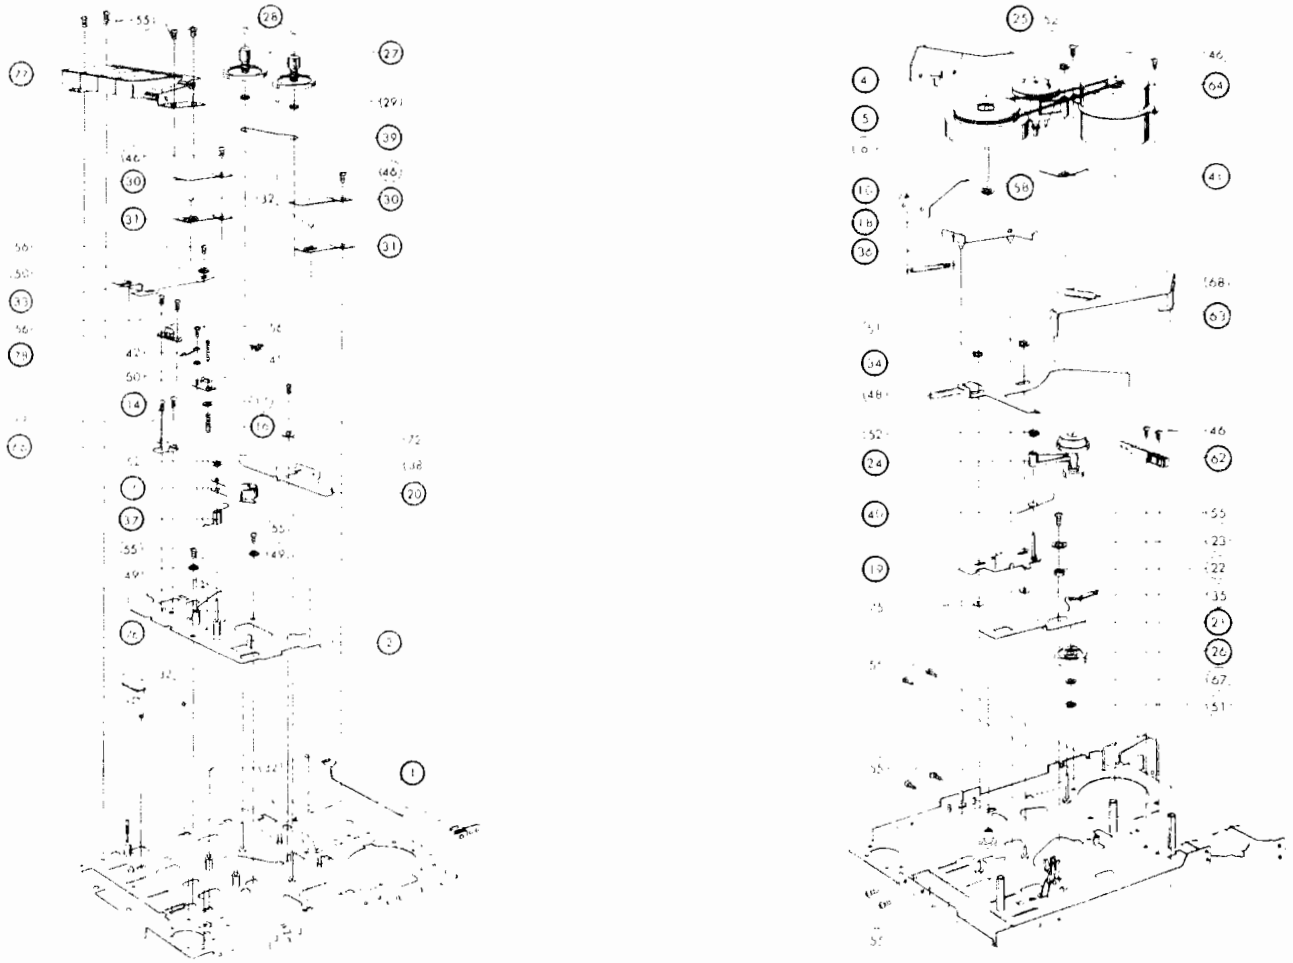

SCHEMATIC DIAGRAM (IF-306)

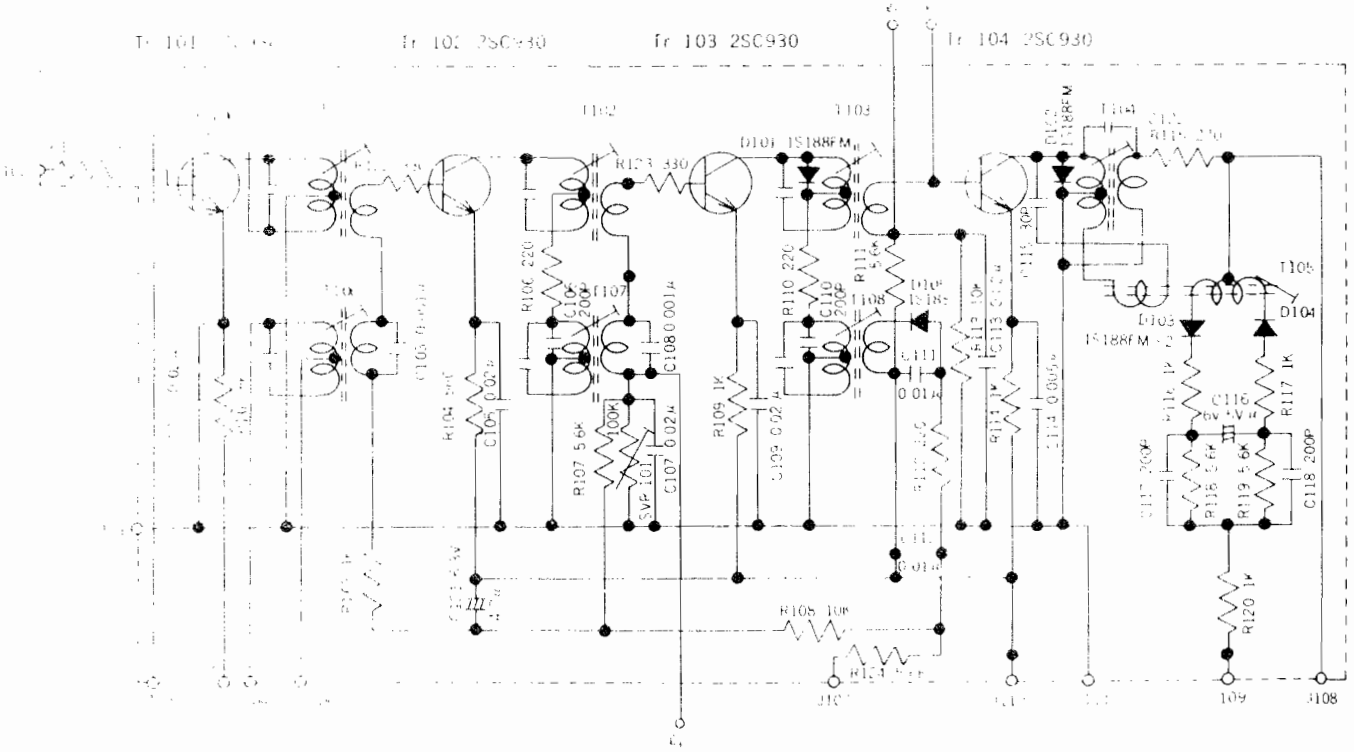

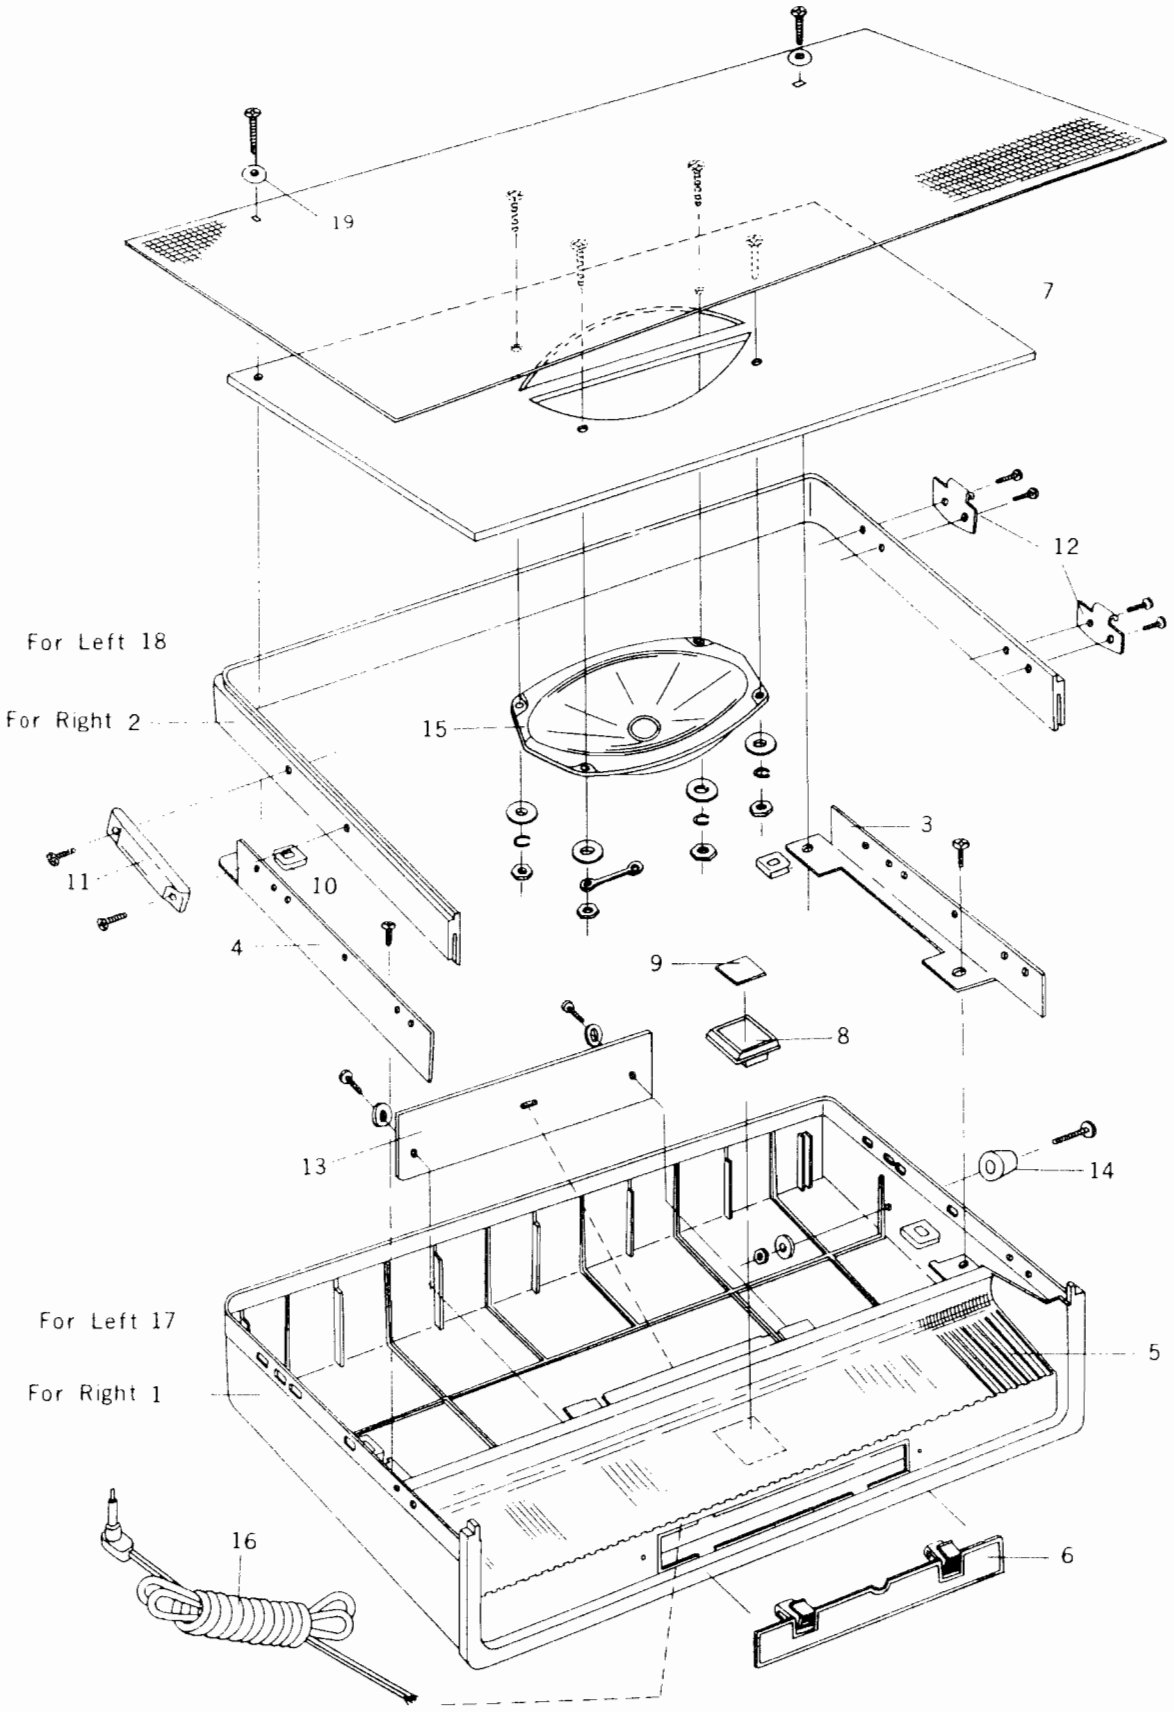
19
7
12
For Left 18
For Right 2
15
3
11
10
4
9
8
13
14
For Left 17
For Right 1
5
16
6

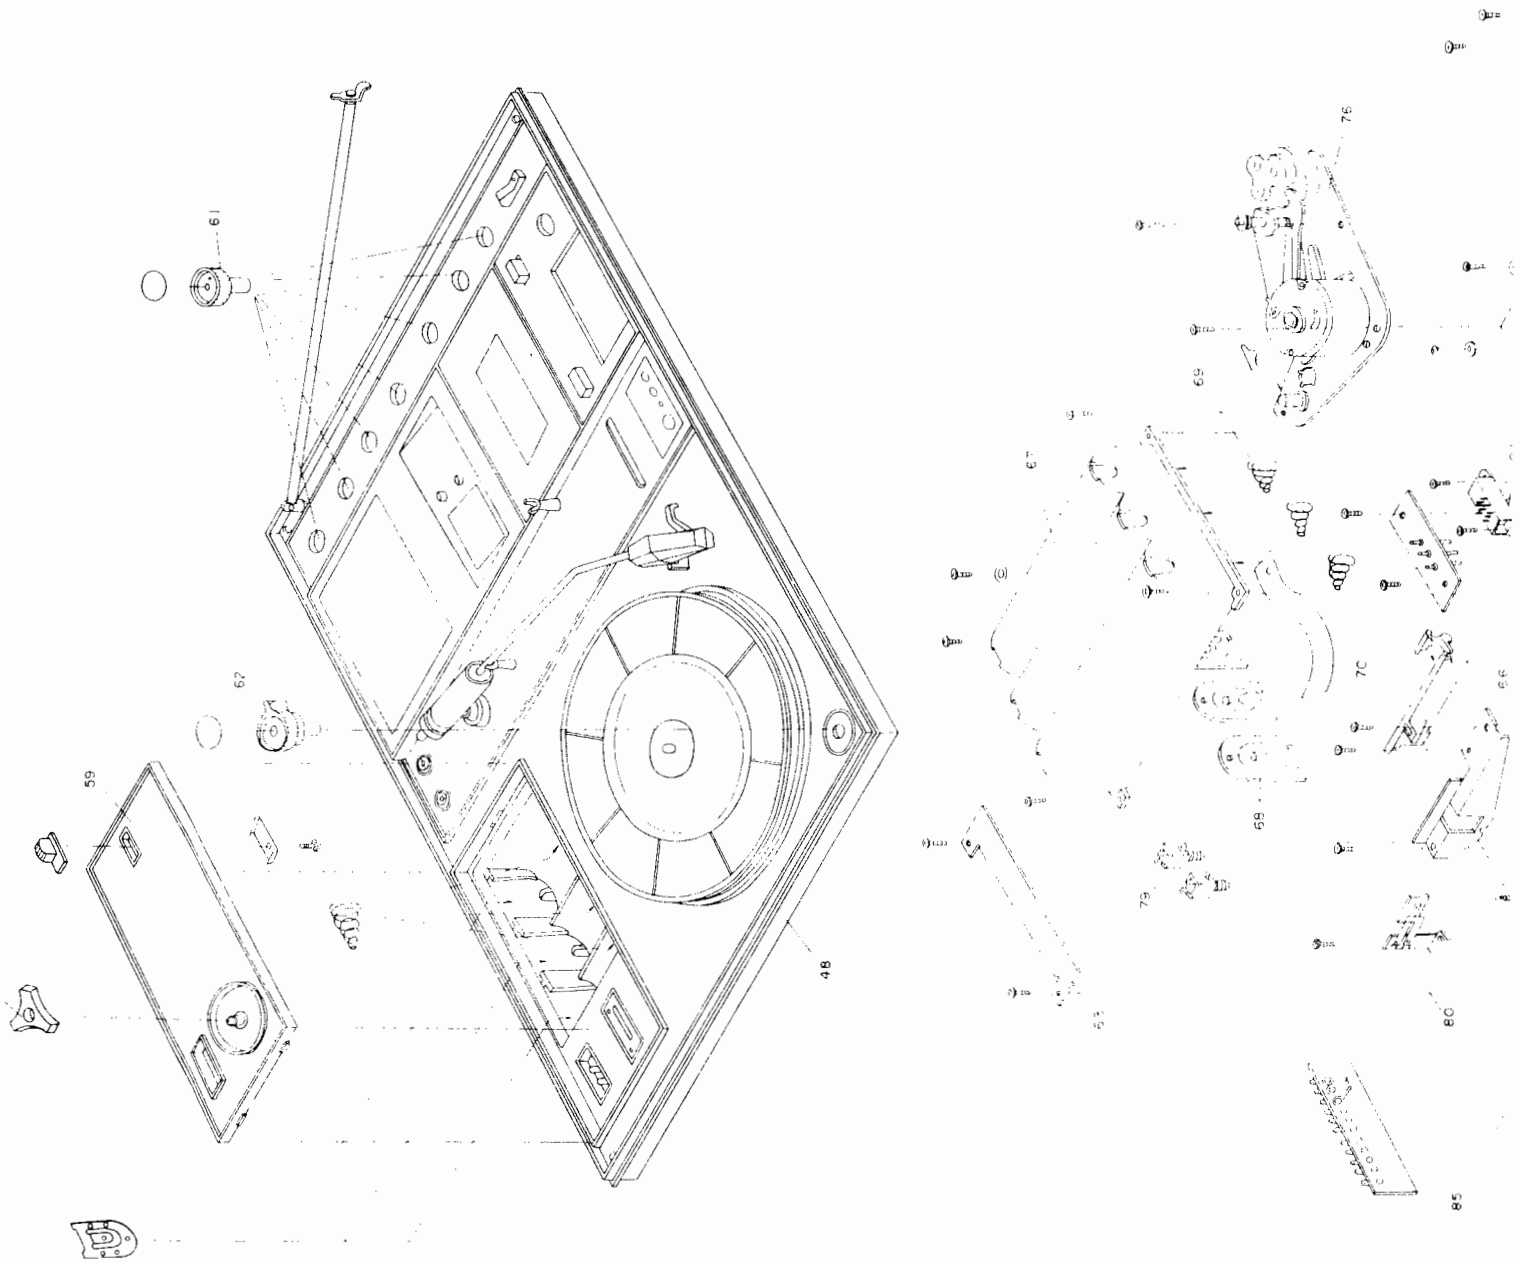
61
62
59
48
76
69
67
7C
66
58
79
80
85

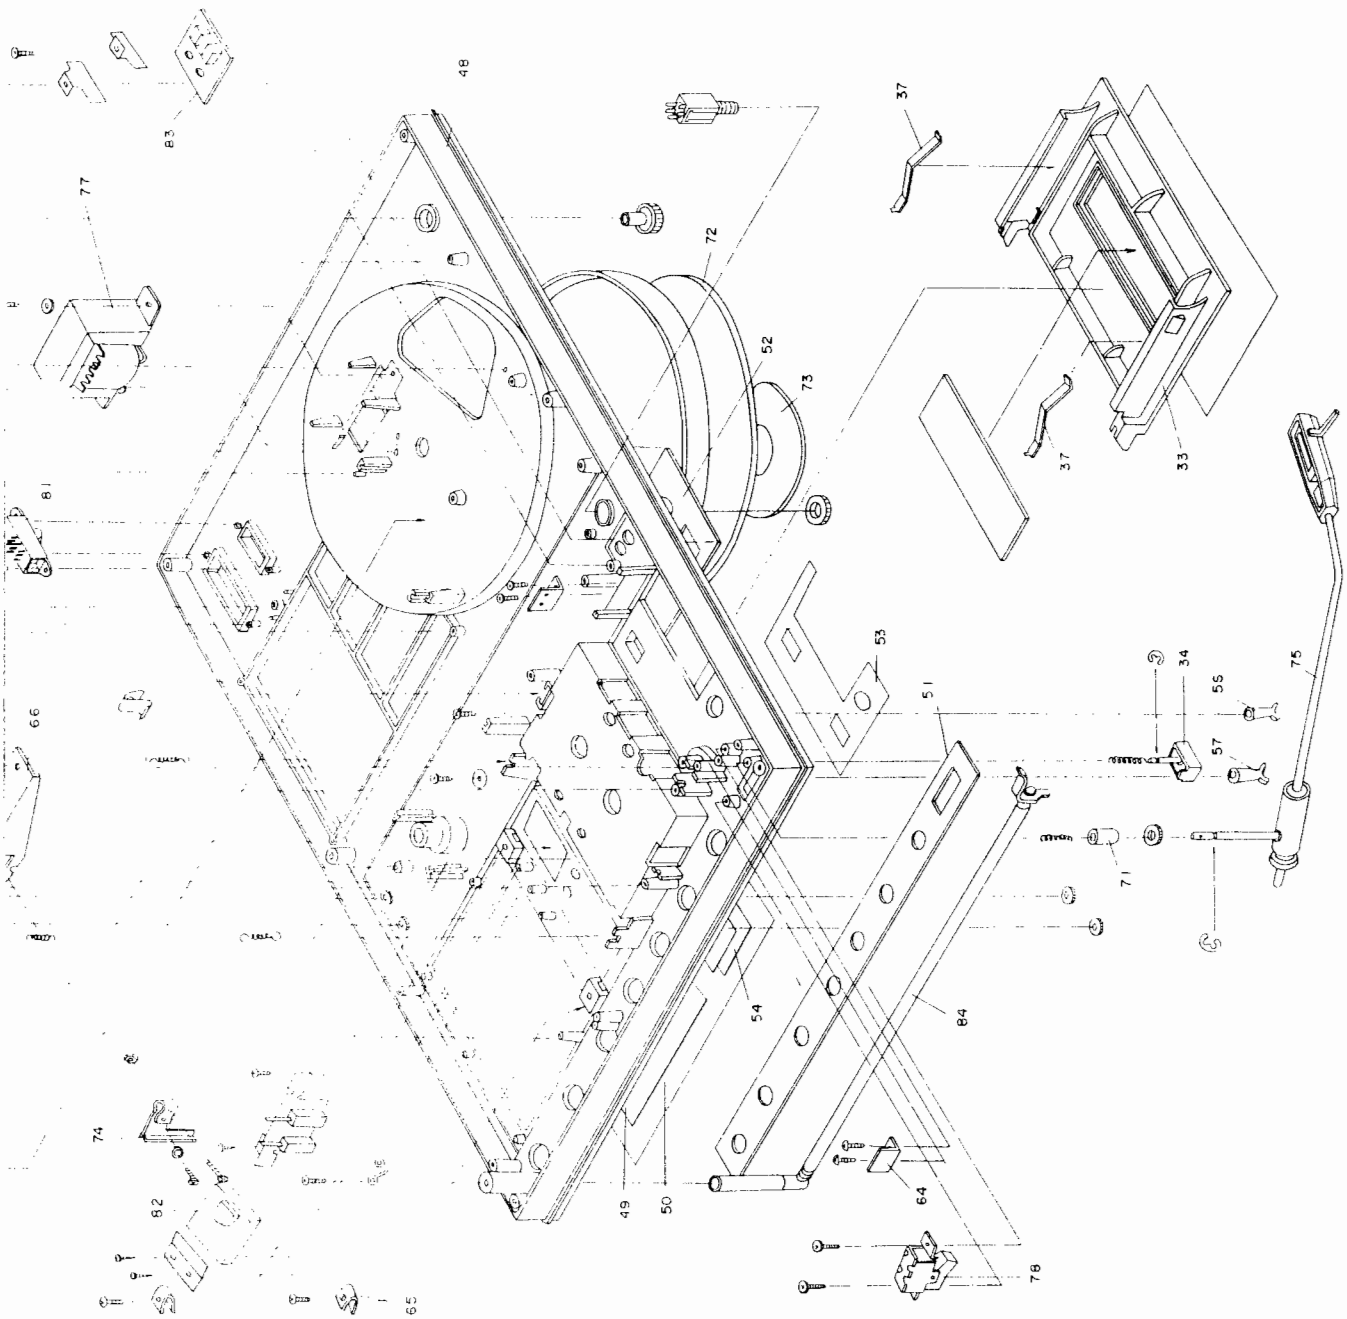
48
83
77
72
37
52
73
37
33
03
81
53
34
55
75
10
66
51
57
30
30
71
54
84
74
30
49
50
64
62
78
65

SCHEMATIC DIAGRAM (CST-101)

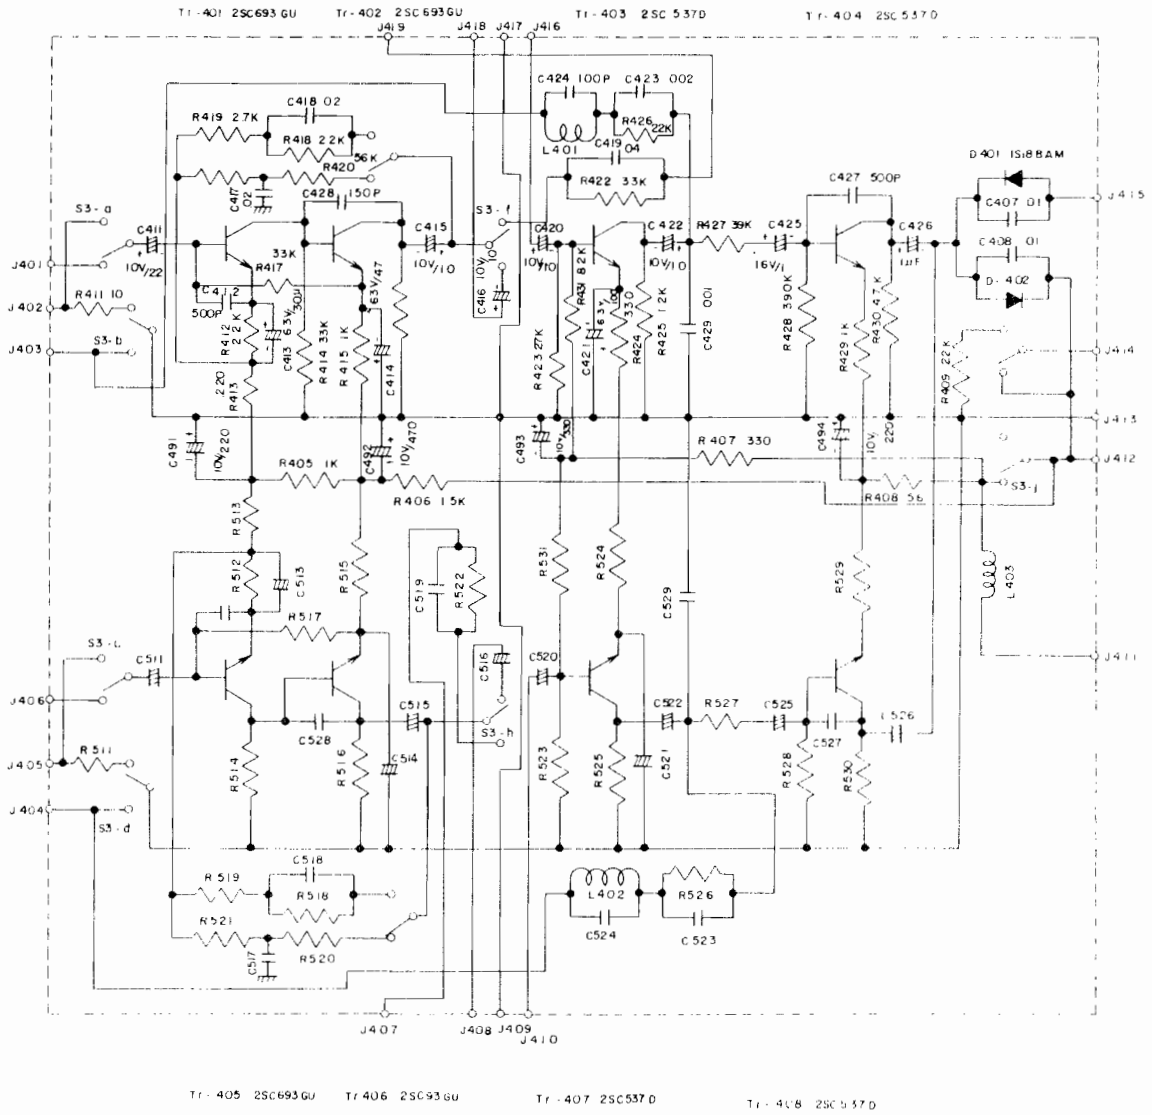

Tr-5 2SB303(B)　　Tr-6 2SB186(A)　　Tr-7 2SB186(B)　　Tr-8,9 2SB405R

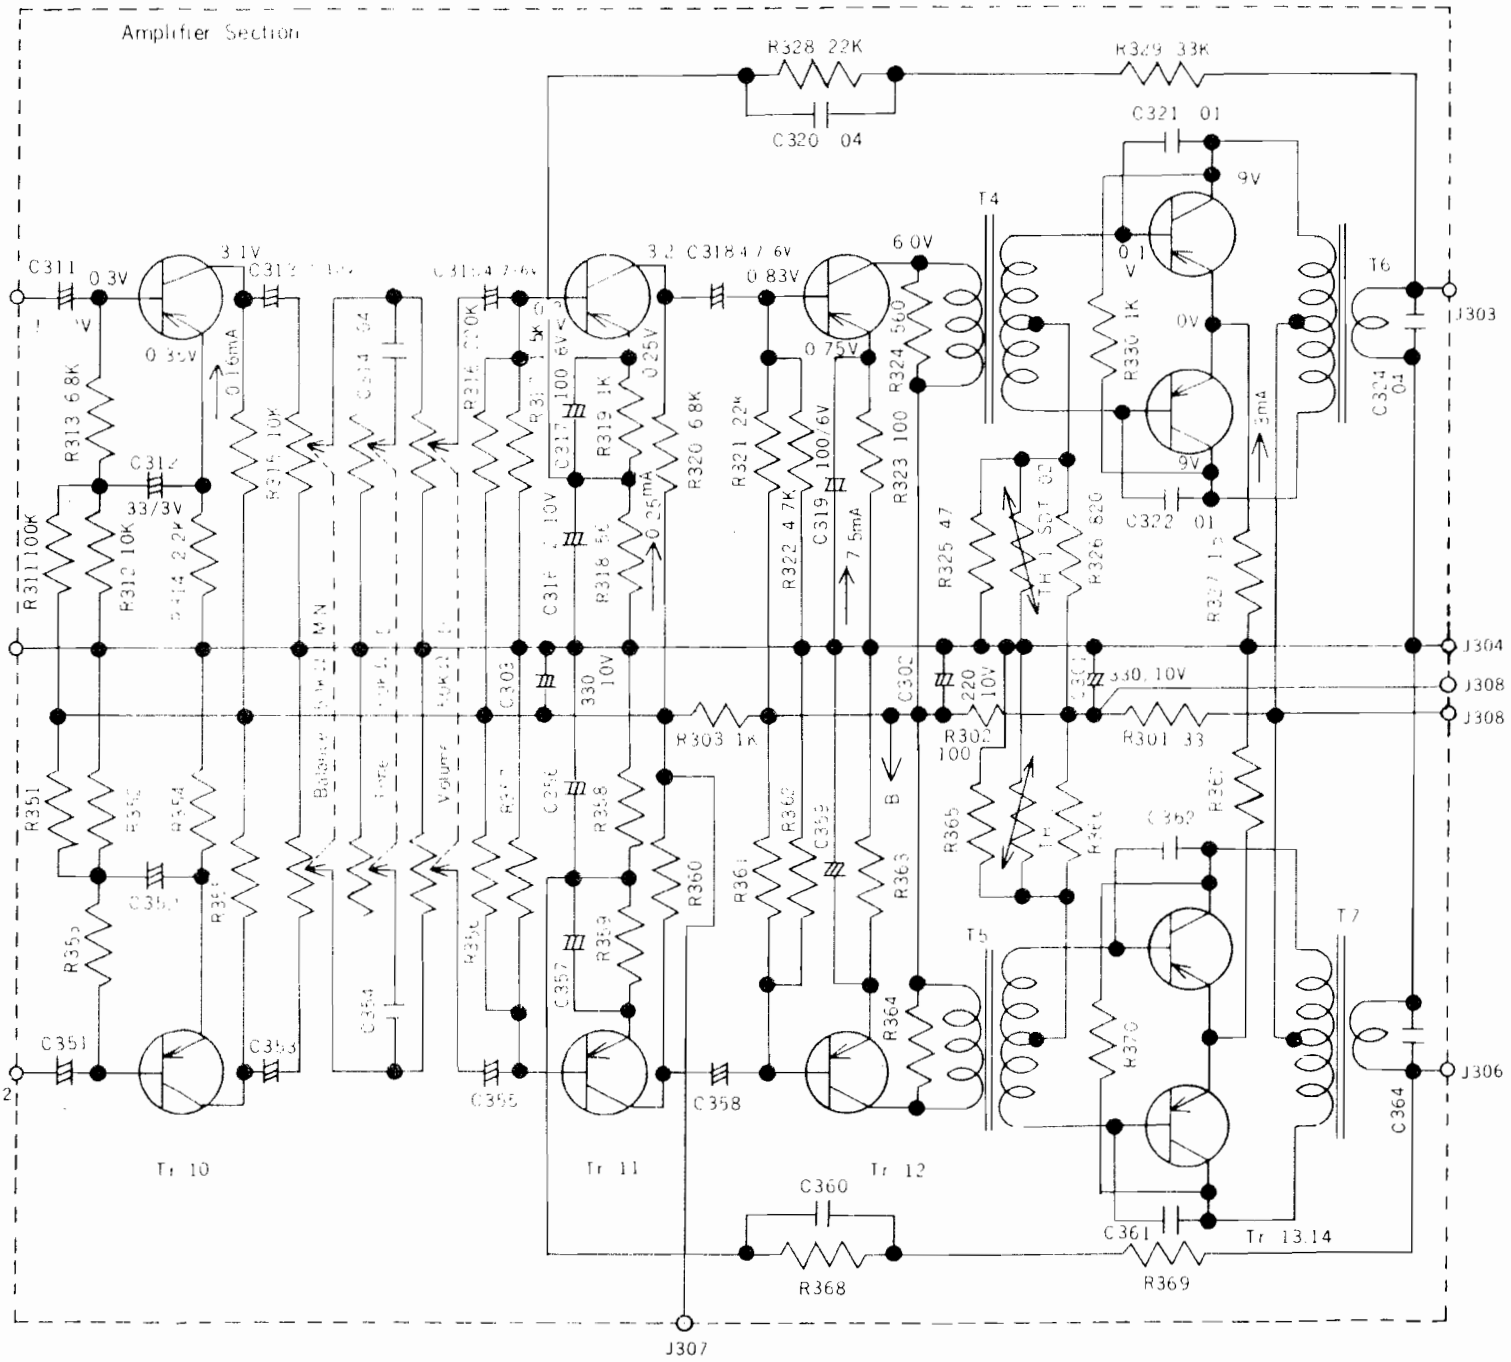

SCHEMATIC DIAGRAM (G-2615N)

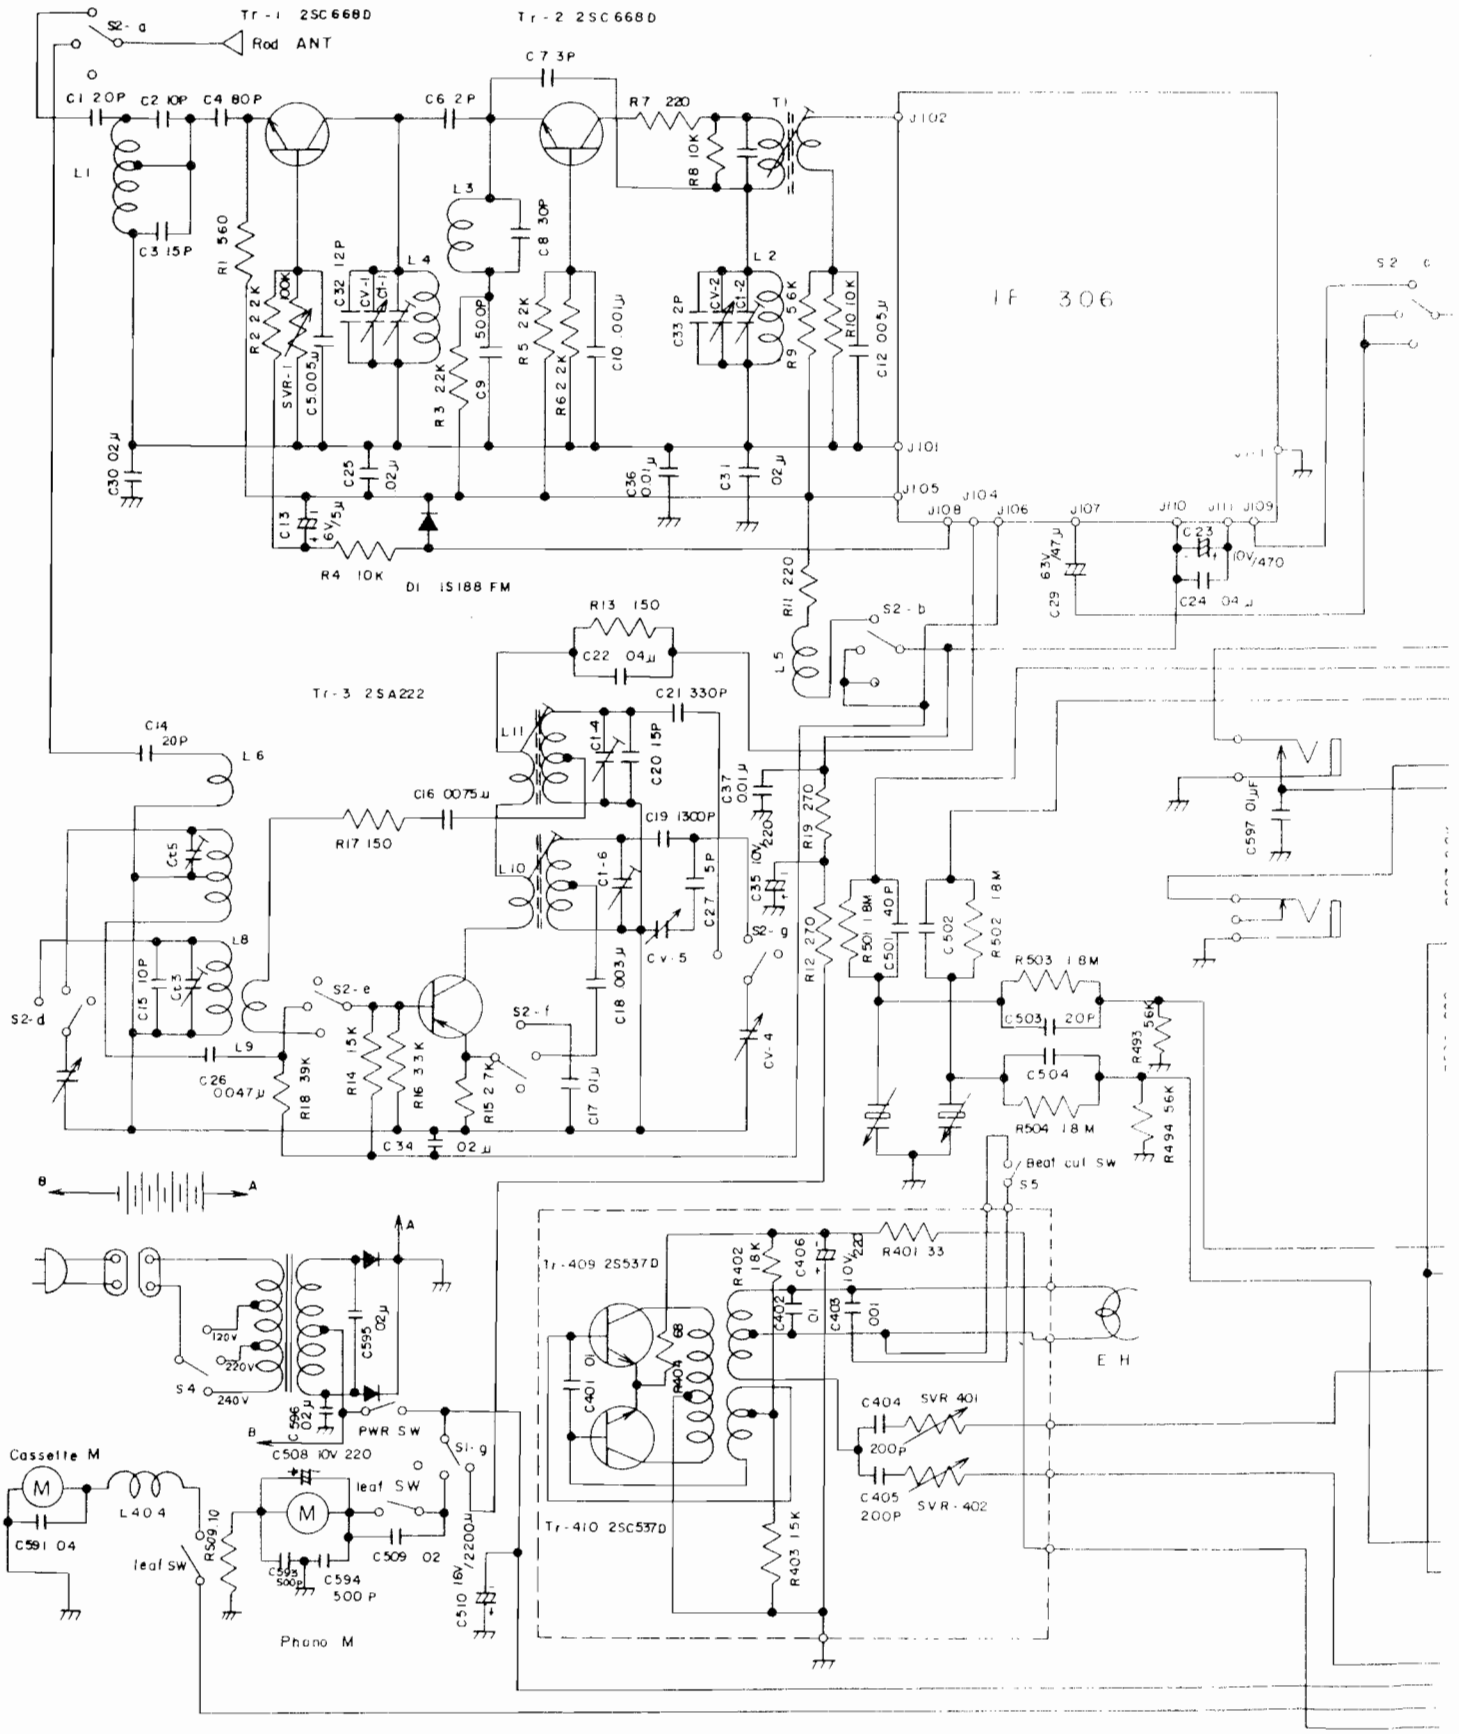

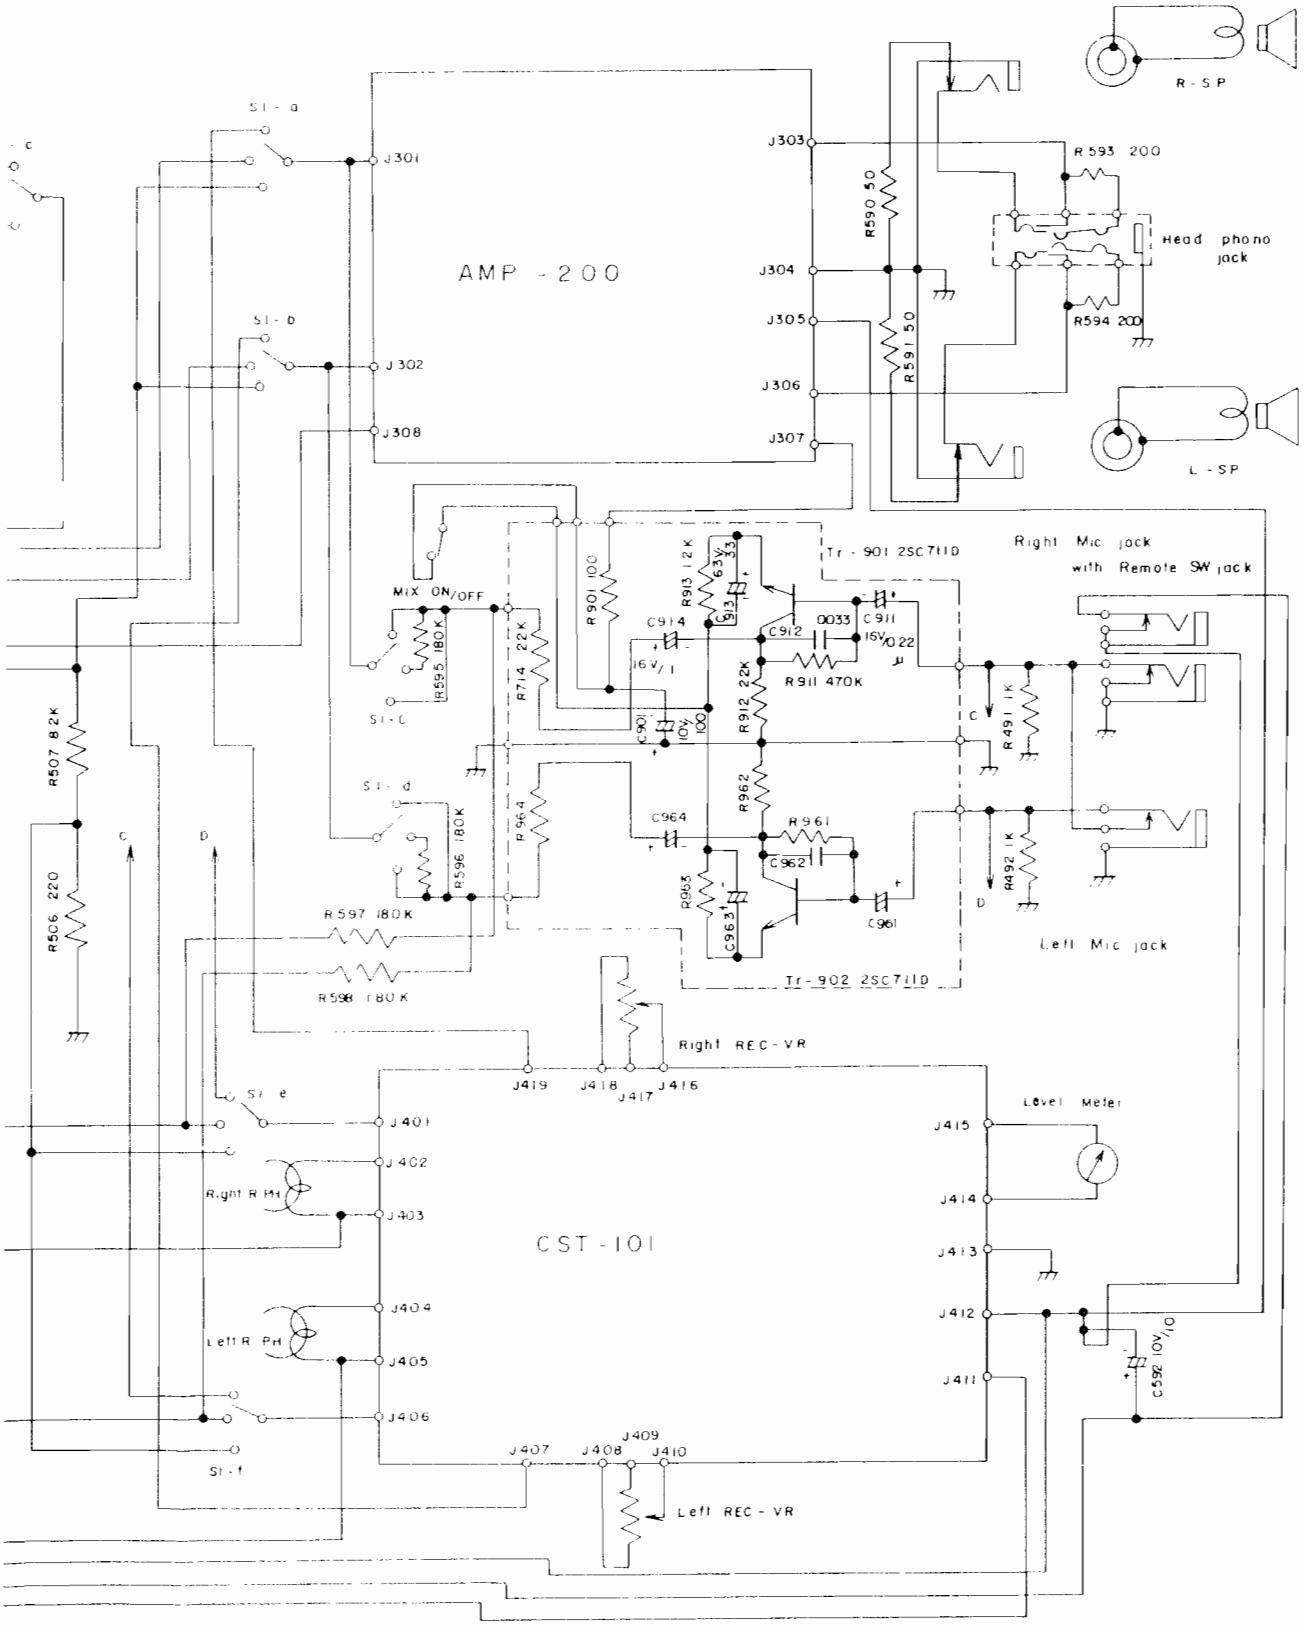
AMP - 200
CST - 101
R - SP
L - SP
Head phono jack
Right Mic jack with Remote SW jack
Left Mic jack
Tr - 901 2SC711D
Tr - 902 2SC711D
MIX ON/OFF
Right REC - VR
Left REC - VR
Level Meter
Right R PH
Left R PH
J301
J302
J303
J304
J305
J306
J307
J308
J401
J402
J403
J404
J405
J406
J407
J408
J409
J410
J411
J412
J413
J414
J415
J416
J417
J418
J419
R590 50
R591 50
R593 200
R594 200
R595 180K
R596 180K
R597 180K
R598 180K
R506 220
R507 82K
R714 22K
R901 100
R912 22K
R911 470K
R962
R961
R964
R491 1K
R492 1K
C901
C911
C912
C914
C961
C962
C963
C964
C592

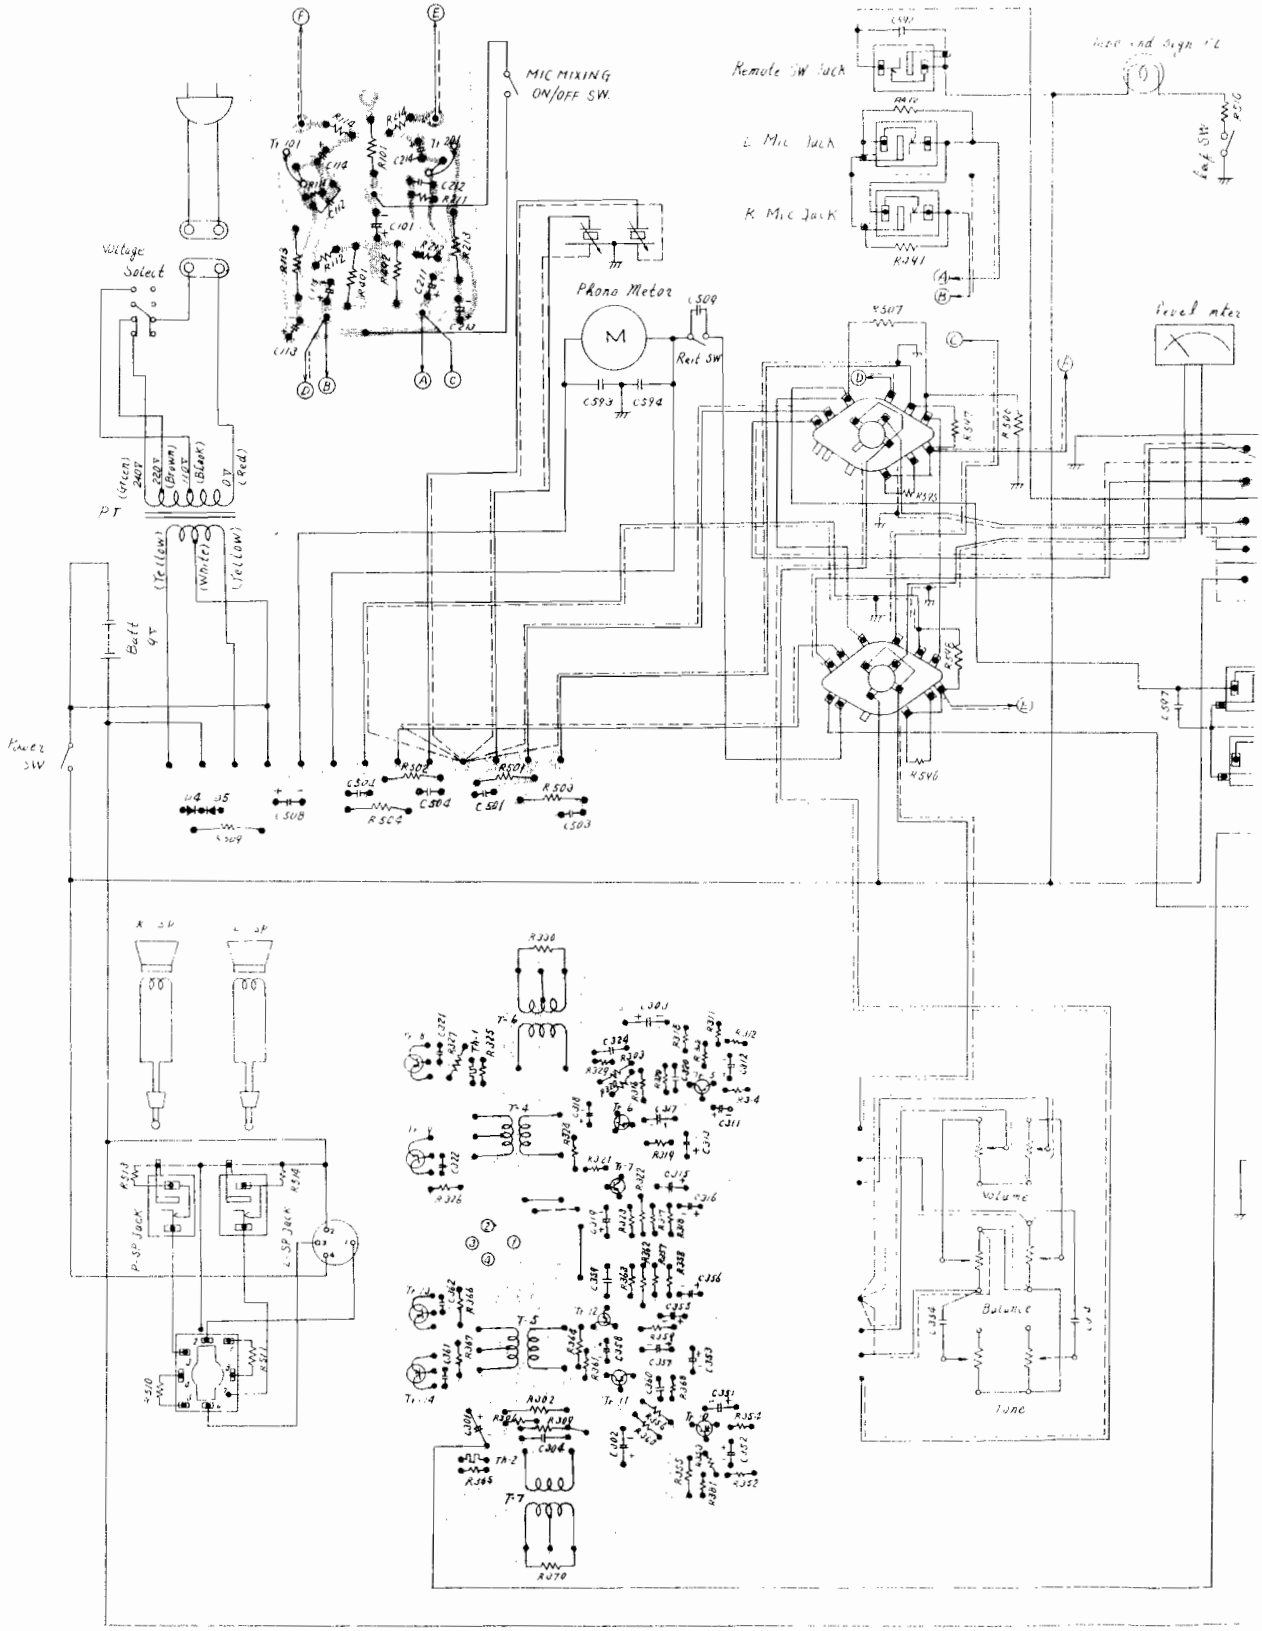
MIC MIXING ON/OFF SW.
Remote SW Jack
L Mic Jack
R Mic Jack
Phono Motor
Rec SW
Level meter
Voltage Select
PT
Batt
Power SW
R-SP Jack
L-SP Jack
Volume
Balance
Tone

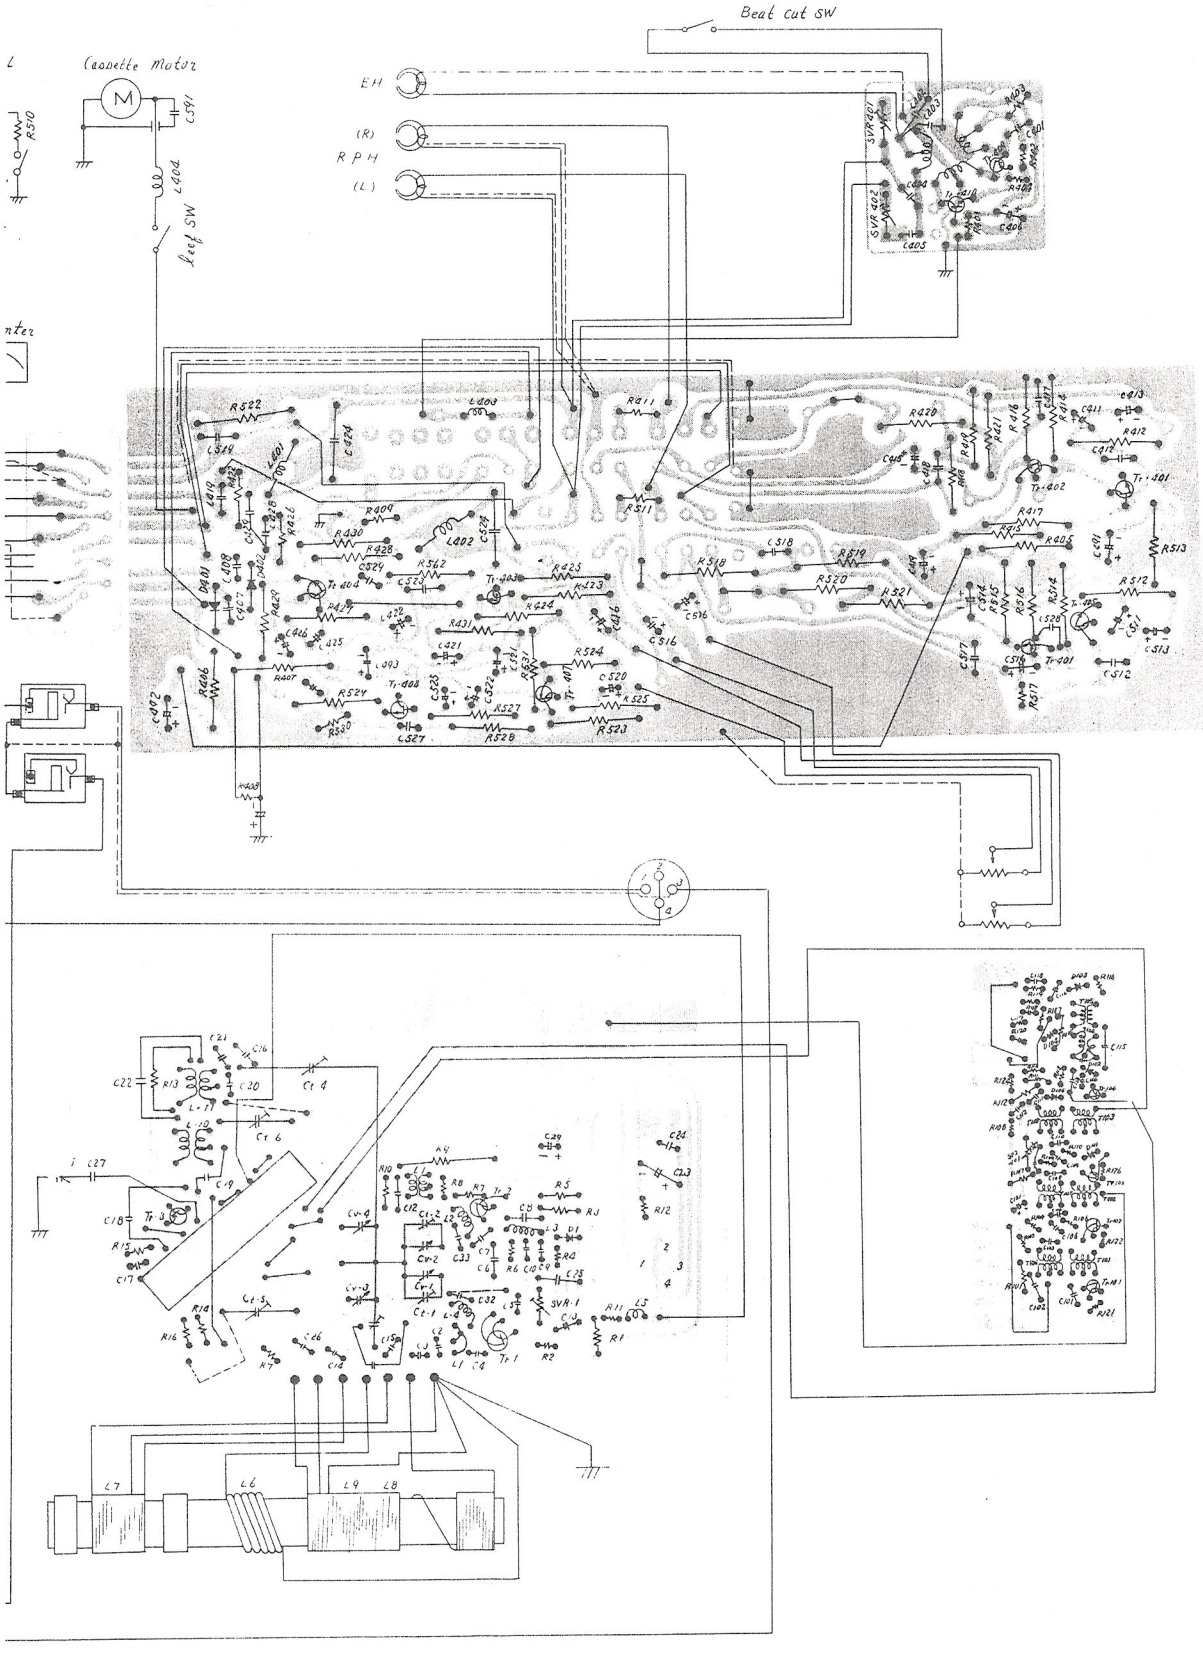

SANYO ELECTRIC TRADING CO., LTI
SANYO ELECTRIC CO., LTD.
OSAKA, JAPAN

WM-553 ; Nov., 1972 Printed in Jap